


UNPACKAGING

DOOR SHOWN IN PACKAGING

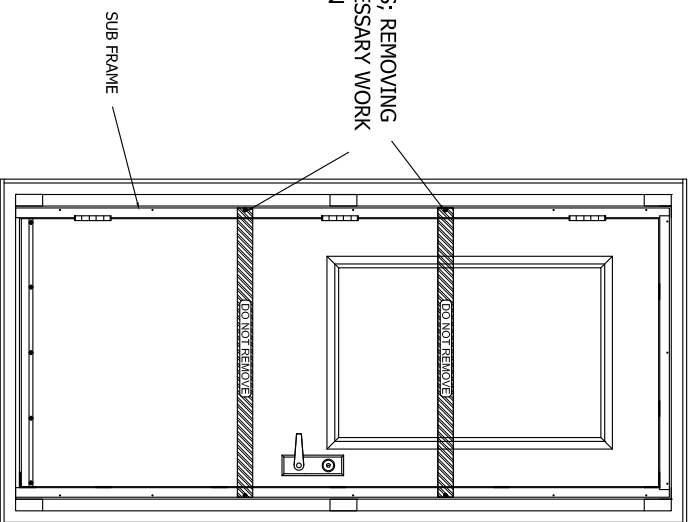

DO NOT REMOVE SHIPPING STRAPS; REMOVING THESE STRAPS WILL CAUSE UNNECESSARY WORK DURING INSTALLATION

DOOR IS SHIPPED "PRE-PLUMBED"
DO NOT REMOVE PLASTIC SHIMS
LOCATED BETWEEN DOOR AND
FRAME DURING UNPACKAGING

REMOVING DOOR FROM PACKAGING:

- 1: Remove Screws Securing Door To Crate From Perimeter Of Sub Frame (DO NOT REMOVE SCREWS ATTACHING DOOR SHIPMENT STRAPS TO SUBFRAME AS SHOWN, THESE STRAPS WILL BE REMOVED DURING INSTALLATION)
- 2: After All Screws Are Removed, The Door May Be Lifted Out Of Its Shipping Container
- 3: SECURE DOOR IN UPSTANDING POSITION, IT WILL NOT BALANCE ON ITS OWN AND MAY FALL OVER CAUSING UNREPAIRABLE DAMAGE OR INJURY

A & A SHEET METAL PRODUCTS, INC.
LA PORTE, INDIANA 46350



DRAWN BY: TJL

REVISION

TITLE

Quick Mount Door Installation Instructions

MODEL NUMBER

DATE 11/2/2009

CUSTOMER


SCALE PAGE

Not to Scale 1 Of 4


DRAWING NUMBER

MC11209

INSTALLATION

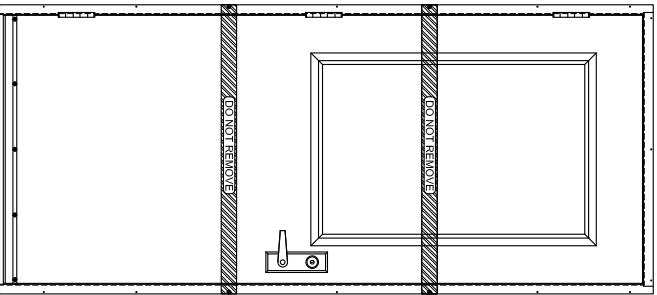

- OLD DOOR AREA PREP:
- 1: Remove Currently Installed Door From Current Wall Frame
 - 2: Remove Hinges And Lockset Hardware From Currently Installed Frame
 - 3: After All Hardware Is Removed, The Internal Surfaces Of The Current Frame Should Be Smooth And Free Of Any Protrusions. Remove Any Existing Protrusions That May Block The Retro Fit Door From Sliding Into Place Over Existing Frame.

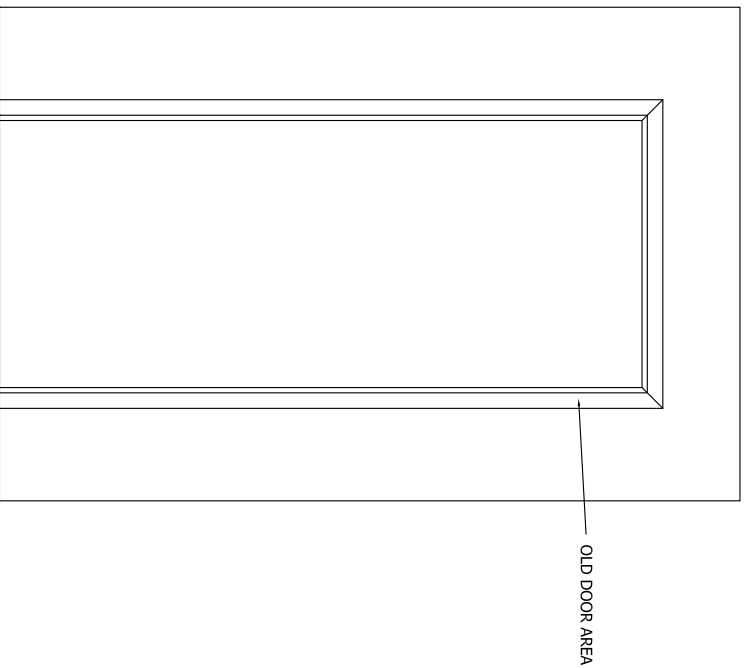

A & A SHEET METAL PRODUCTS, INC.
LA PORTE, INDIANA 46350



DRAWN BY: TJL REVISION

TITLE

Quick Mount Door Installation Instructions

MODEL NUMBER

DATE 11/2/2009

CUSTOMER

SCALE

Not to Scale

PAGE

2 Of 4



DRAWING NUMBER

MC11209


INSTALLATION

RETRO-FIT DOOR INSTALLATION

- 1: Insert Door And Frame Assembly Into Existing Frame
- 2: Use A Level Above Door Subframe And On The Hinge Side Of Sub Frame To Level Door And Frame Assembly. FAILURE TO LEVEL DOOR AND FRAME ASSEMBLY MAY RESULT IN FAULTY OPERATION OF DOOR
- 3: Install Provided 10-24 Stainless Steel Screws Into All Subframe Holes Excluding Shipment Straps
- 4: Remove Shipment Straps
- 5: Install Provided 10-24 Stainless Steel Screws Into Shipment Strap Holes

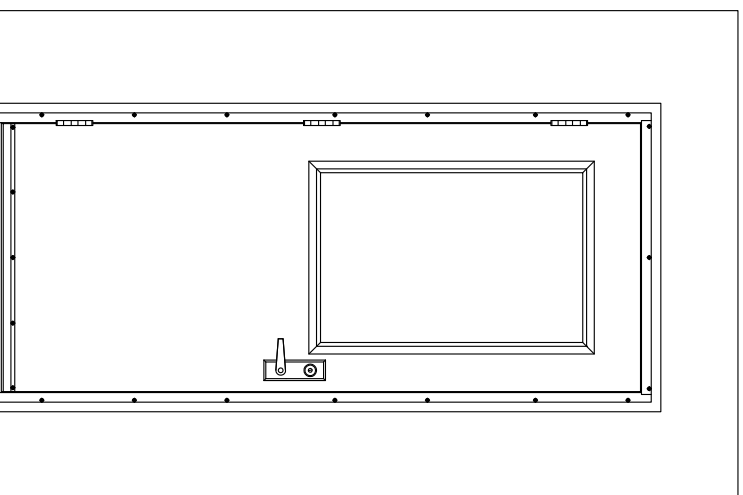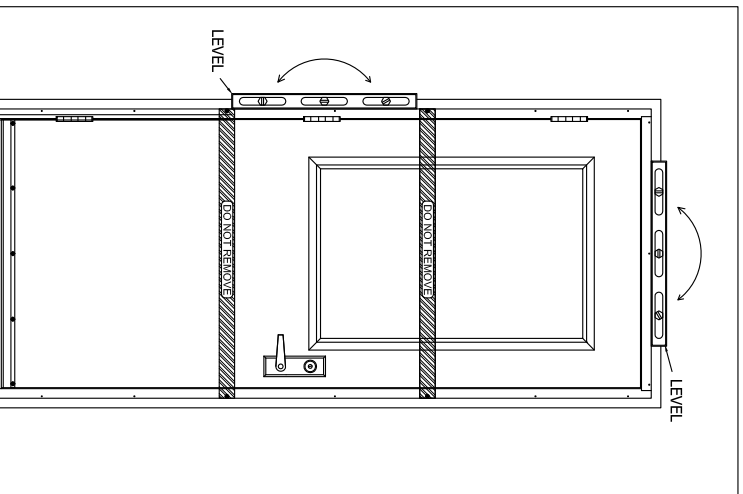

COMPLETED EXTERIOR INSTALLATION



A & A SHEET METAL PRODUCTS, INC. LA PORTE, INDIANA 46350	
	DRAWN BY: TJJ REVISION
TITLE <i>Quick Mount Door Installation Instructions</i>	
MODEL NUMBER	DATE <i>11/2/2009</i>
CUSTOMER	

SCALE	PAGE	DRAWING NUMBER
Not to Scale	3 Of 4	MC11209

INSTALLATION

RETRO-FIT DOOR INSTALLATION

- 1: Upon Completion Of Exterior Installation Open The Door And Remove Plastic Shimms
- 2: Install Provided 10-24 Stainless Steel Screws Into Interior Sub Frame Stop Holes
- 3: Install Door Closer Frame Mount In Accordance With Manufactures Recommendations
- 4: Install Exit Device Frame Latch In Accordance With Manufactures Recommendations
- 5: Apply Provided Self-Adhesive Weatherstripping To The Stop Of The Sub Frame

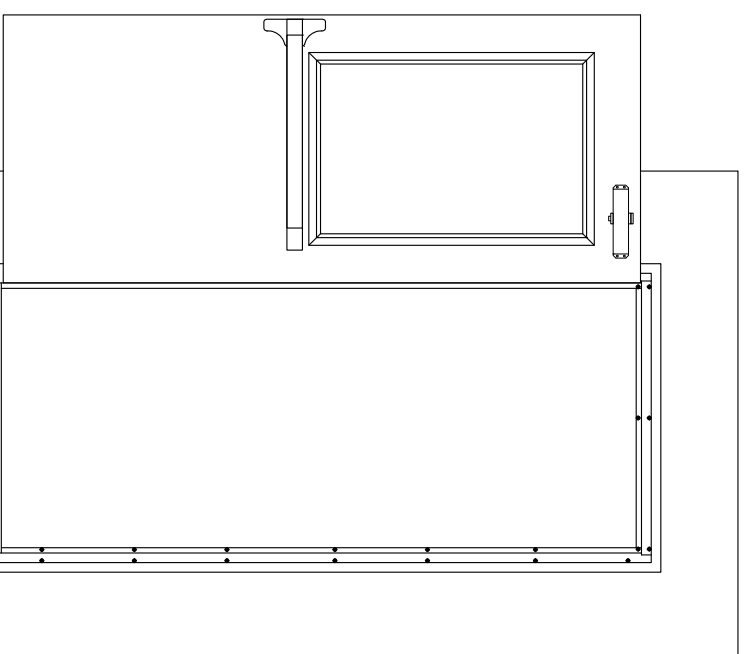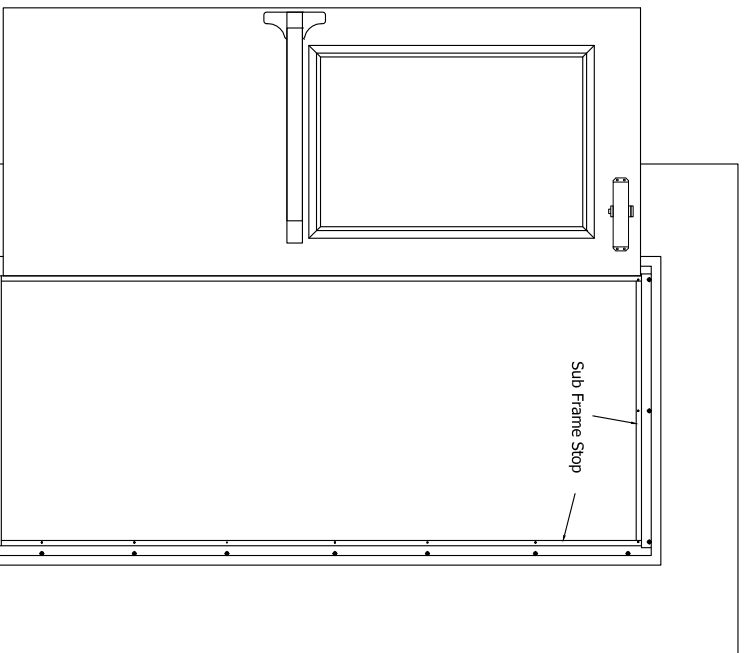

COMPLETED INTERIOR INSTALLATION

A & A SHEET METAL PRODUCTS, INC.

LA PORTE, INDIANA 46350



DRAWN BY: TJJ

REVISION

TITLE

Quick Mount Door Installation Instructions

MODEL NUMBER

DATE

11/2/2009

CUSTOMER

SCALE

Not to Scale

PAGE

4 Of 4

DRAWING NUMBER

MC11209